

OPERATION

To operate, push the switch on the end of the Towel Stand by the cord set. It will be illuminated when on and will be dull when off.

Your Warmrail Heated Towel Stand costs less or similar to run to a regular light bulb. It will take approximately 45 minutes for the Heated Towel Rack to reach its operating temperature, although this time will be shorter if towels are in place.

The Warmrails Heated Towel Stand operates with a fixed power output, (typically 90° F above the ambient temperature). However, when operated with several layers of towels over the Heated Towel Stand, the temperature will increase as much as 105° F above ambient. Once the towels are removed and where the rails are exposed, the temperature of the Heated Towel Stand will quickly drop back. When operating correctly, the Heated Towel Stand, although hot to the touch, is not hot enough to cause scorching (even a temperature of 115° F appears hot to the touch).

Please note: damp or wet material that has either been dyed, or is not colorfast, can cause discoloration in the finish if that material is draped over a Heated Towel Stand while hot. Again, it is suggested that items are dried by using a completely protective layer of material such as a towel underneath.

Warning—this appliance is intended only for drying textiles washed in water. Fabrics that contain soap or detergent residue may show what appears to be scorch marks. However this is simply the discoloration of the residue. The Heated Towel Stand does not reach sufficient temperature to scorch fabric.

Warmrails does not accept responsibility for any damage, discoloration or other damage to any item regardless of circumstance. To reduce the possibility of damage, do not place any items other than towels directly on the Heated Towel Stand—always have a completely protective layer of towels between the Heated Towel Stand and any other item.

CARE

The Heated Towel Stand should be wiped down from time to time with a damp cloth.

Do not use any abrasive or corrosive cleaners.


Marketed and Distributed by

Warmrails

Huntington Beach, CA 92649
Phone Toll Free: (877) 927-6724

towels**warmer** and **drying**stand

TRADITIONAL INSTRUCTION MANUAL

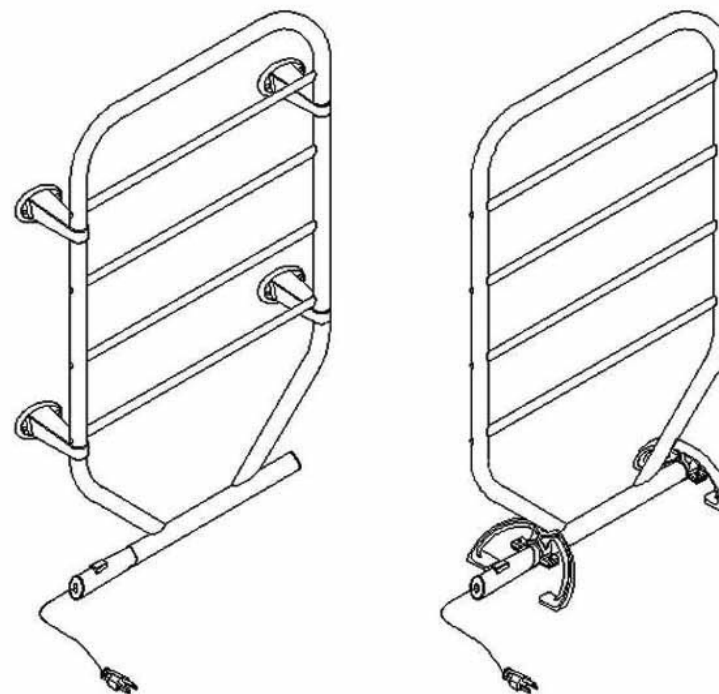

DUAL INSTALLATION OPTIONS: Portable Freestanding or Plug-In Wall Mounted. *(all hardware included)*


cUL US LISTED

ASSEMBLY

This appliance must be used in accordance with any prevailing electrical code and relevant electrical wiring rules and regulations and in particular those regulations that cover use of appliances and accessories in damp situations such as bathrooms, showers, laundries and other areas with fixed water containers.

FREESTANDING OPTION


- Your warm rail comes complete with eight short screws and two brackets which you will find in a small plastic bag. Use four of the screws to secure the legs to the Heated Towel Stand, and the other four are for permanent installation of the Heated Towel Stand to the floor.
- To assemble, first remove the four screws and the brackets from the plastic bag.
- Hold the Heated Towel Stand upside down (perhaps leaning it against a chair) and position the legs so that the feet are facing outwards from the center of the base of the towel stand (refer to the illustration). Line the screw holes in the bracket up with those in the legs and using a Phillips screw driver, tighten the screws until the legs are firmly attached to the base of the Towel Stand.
- The Traditional Freestanding Heated Towel Stand must only be used with the legs properly fitted.

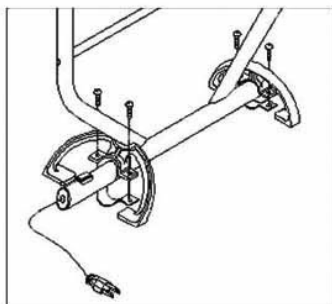

WALL MOUNT OPTION

- Position wall brackets on the Heated Towel Rack (refer to the diagram on the front of the instruction manual for suggested bracket placement).
- The locking clip will only slide one way to attach to the wall bracket. So test it on the wall bracket before you position them on the Heated Towel Rack. Once you have established which direction the locking clip slides onto the wall bracket, place the wall bracket in the correct position on the Heated Towel Rack. Press the locking clip onto the bar (to the side of the wall bracket so that it will enable you to slide the clip onto the wall bracket). Then slide across until the locking clip is flush with the wall bracket).
- With the wall brackets in the correct position, hold the Heated Towel Rack against the wall at the location you would like it to be installed.
- Use a pencil or pointed tool to mark the location of the screw holes spaces onto the wall through the screw holes in the wall brackets. Put the Heated Towel Rack aside and drill pilot holes through the marks you have made on the wall.
- Where a stud is conveniently located, you can just use the screws to attach the wall bracket. For the remaining wall brackets, use the wall anchors supplied to firmly anchor the screws into the dry wall.
- Push the anchors into the dry wall (you may need to make larger pilot holes where the wall anchors are located).
- Put the screws through the holes in the wall brackets, then hold the Heated Towel Rack back in position on the wall.

- Tighten the screws until the wall brackets are flush against the wall. Use the round plugs to cover the screw holes in the wall bracket.
- Once the legs are securely attached, or the unit is attached to the wall, the Heated Towel Stand can be plugged into an electrical outlet (we recommend using a GFI protected outlet). Push the on/off switch so that the light is illuminated and your warm rail is ready for use.
- Remember, warm rails are so energy efficient, you can leave them running continuously.

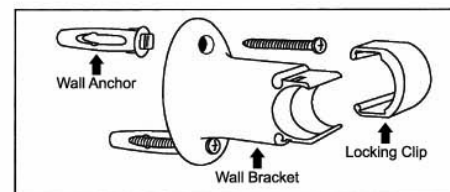

SAFETY INFORMATION

When using any electrical appliance, basic safety precautions should always be observed.

READ THESE INSTRUCTIONS CAREFULLY

- Do NOT use this appliance for other than its intended use.
- To avoid a hazard, the Heated Towel Stand MUST NOT be used to hold towels or any other articles that have been in contact with oil, petroleum based products or dry cleaning fluids (unless completely protected by a layer of material such as a towel underneath).
- Use this appliance only on the voltage specified on the rating plate, or elsewhere in the instructions.
- Regulations require that only authorized persons carry out electrical work. For your own safety and that of others, ensure this is done.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure they do NOT play with this appliance.
- Do NOT store your Heated Towel Stand while hot or still connected to the power supply.
- Do NOT immerse the Heated Towel Stand in water or any other liquid.
- Do NOT allow the cord set to come into contact with heated surfaces during operation.
- This product should NOT be used outdoors.

If the power supply cord for this equipment becomes damaged it must be replaced with the special cord or assembly. Special tools are required for the replacement of the power supply cord and element. A qualified electrician must undertake this replacement.

SPECIFICATIONS

MODEL	HEIGHT	WIDTH	DEPTH
FREESTANDING	34"	21"	6 ¹ / ₂ "
WALL MOUNTED	32 ³ / ₄ "	23 ¹ / ₂ "	3 ³ / ₄ "

Supply: 120 volts a.c. 60 Hz, single phase